



Emerging & Reliable innovations

CONTACT

info@makeitgreen.net

makeitgreen.net





MiG|BioCooker

INSTRUCTIONS

1. Open hatch

2. Put biomaterial into the chamber. **Make sure the material is dry.** Fire the material and wait until it ignites properly before closing the hatch. Continue feeding material during use.

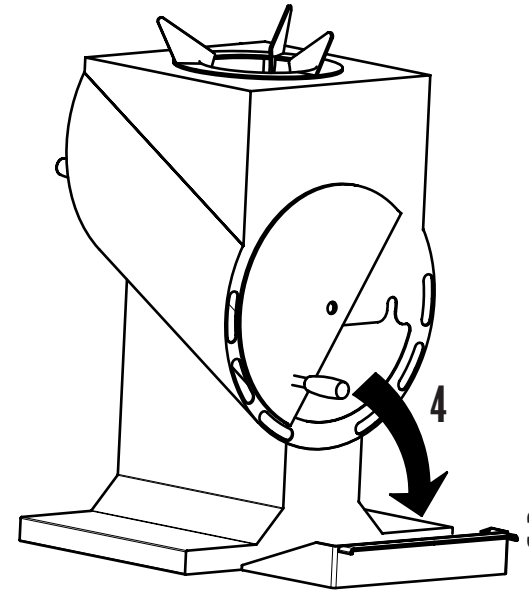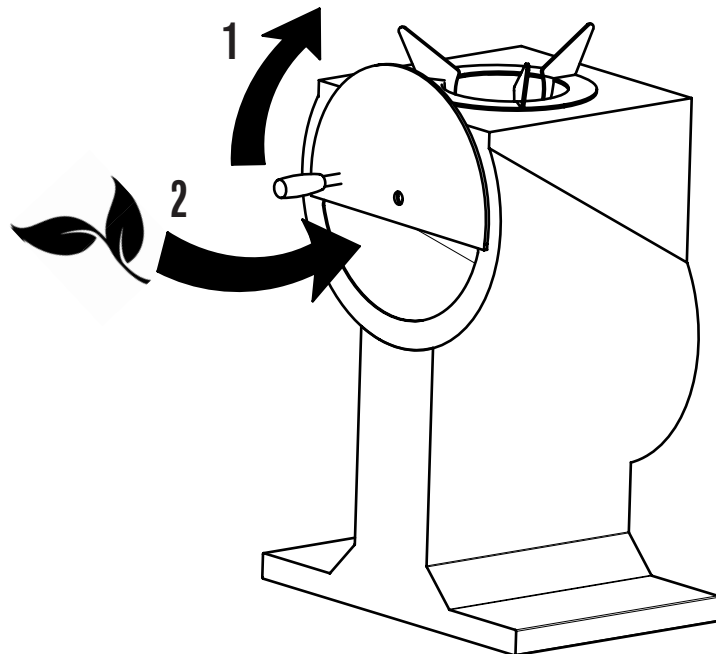

When the cooking is done and it's time to collect the biochar;

3. Place heat-resistant container under the lower door.

4. Open hatch to catch the biochar.

5. Close the hatch and quench the burning biochar by spraying water over it.

! If the chamber becomes full with biochar you can continue to remove it during use to keep a continuous feed.



In case of smoke

1. Check that the cooker is not over loaded, if not;

2. Regulate the smoke by opening the door slightly.



Increase or reduce flames by opening wider (high flame) and closing (low flame) the doors while in use.

